

 
User Manual

LEAP Chesstimer PQ9917

I Key Features

- Easy to set up and use.
- Count up & count down ,bonus/increment and delay.
- Supports turn on/off the count-up mode .
- Ability to the time always count down to 0.00 and then count upwards.
- Preset-table countdown timer ,maximum 10 hours.
- Create and save a custom timing mode for each player,easy to change time during games.
- Ability to check and change number of moves in all timing modes.
- Audible alarm can be turned on or off.
- Large LCD display , power supply :1pc AA battery (Not included) .


II Key Description:

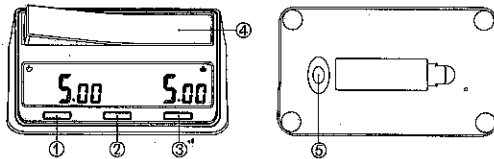

- ① [+] When timer is in setting mode, pressing this button one time will increase the value of the flashing field by 1. In pause mode, touching and holding this button for two seconds will change the number of moves.
- ② [▶ ||] When timer is in play mode, pressing this button one time will start or pause the current timing mode. Touching and holding this button for two seconds will enter setting mode.
- ③ [-] When timer is in setting mode pressing this button one time will decrease the value of the flashing field by 1. Sound on / off when holding the button for two seconds.
- ④ [Lever] When one side of the lever is depressed ,the timer on the opposite side will count up or down.
- ⑤ [ON/OFF button] Located at the bottom of the clock: switch on and off or reset for next game.

1

 III Display



Hour Minute Second Hour Minute Second

- ♣ ♠ : Indicates which player is white and which player is black.
- ⏰ : When displayed the player's time has expired.
- 🔊 : When displayed sounds are turned on.
- ⏸ : Indicates the timer is paused.
- ◀ : Indicates the left side of the timer is running.
- ▶ : Indicates the right side of the timer is running.
- MOVES : Displays the number of moves.
- BONUS : Displayed when bonus time is enabled.
- DELAY : Displayed when delay time is enabled.
- UP : Displayed when count up time is active.
- 🔋 : Low Battery.

IV Operating Instructions

1) On/Off:

After installing the AA battery, press the [ON/OFF] switch on the bottom of the timer to turn on. When the timer is turned off and the battery remains installed the timer will save the last used timing settings and will start with those settings. When the battery is removed and re-installed the timer will beep when turned on and the timer will return to the default setting displayed below with no delay or bonus and the alarm turned off.

2) Time start or pause :

Pressing the [Lever] key to choose ♣ ♠ player, white player play first. Press the [▶ ||] button to start the time. And adjust the left/right lever so the side supposed to start. Pressing the [▶ ||] button to pause/restart the time during the game.

 
Special notice: if change the [Lever] key during pause, the " Error " will be displayed. The time can go on smoothly only switching back the [Lever] key.

3) Restart

Turn off the [ON/OFF] button on the bottom of the timer and switch on it again .

2

4) Alarm on/ off


Press and hold the **[-]** button for two seconds to turn on or off alarm. When sound is activated the  icon is shown in the display and a beep will be heard at 10 seconds and each second of the last 5 second of a period. At zero seconds there will be a long beep.

5)Settings Mode

After turn on the clock, to set or change the time press and hold the **[▶▶]** button for two seconds to enter the settings mode. The first digit on the left side of the timer will be flashing. Use the **[+]** or **[-]** buttons to increase or decrease that value and then press the **[▶▶]** button to move to the next digit. Follow these steps to set the hours, minutes and seconds on the left side of the timer and then press the **[▶▶]** button to move to the first digit on the right side of the timer. You will notice that the times set on the left side of the timer are automatically copied to the right side. If you are using the same time for both sides of the timer you can use the **[▶▶]** button to quickly move through the hours, minutes and seconds without making changes. After all setting, press the **[▶▶]** button to exit the setting mode or press and hold the **[▶▶]** for two seconds to exit setting mode during setting.

Setting sequence as below :

 Game time(hour/minute/second)on the left side --- game time (hour/minute/second) on the right side ---bonus time on the left side ---bonus time on the right side ---delay time on the left side - -delay time on the right side ---UP(ON/OFF).

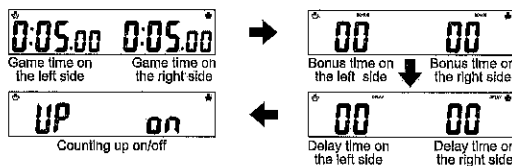

Time setting range:Game time: 0 - 9h59'59". Bonus time: 0-59". Delay time :0-59". Counting up switch:ON/ OFF.

Special notice 1: If "Up on" icon is displayed ,the count up time mode will be active ,the game time will be from 0:00.00 to count upwards automatically after count down . If "Up OFF" icon is displayed, it shows count up mode will be not active , the game time will be end at 0:00.00.

3

Special notice 2:If bonus and delay's time setting will be 0, it will show turn off the bonus and delay feature .if both bonus time and delay time can be set to the value more than zero ,the bonus feature will be prior active ,the delay feature can be only active under the bonus time is off or zero.

 
6) Check and change the move number.

In pause mode,press and hold **[+]**button 2 seconds to enter the move number modification mode. Use **[+]** and **[-]** to adjust the digit or use **[▶▶]** to move onto the next digit. When all moves have been modified, press the **[▶▶]** key to exit .

7) Change the time during a game

Press **[▶▶]** to pause the game,then press and hold **[▶▶]** for 2 seconds to enter the setting mode. The very left digit is flashing. Use **[+]** and **[-]** to adjust the digit or use **[▶▶]** to move onto the next digit. When all moves have been modified, press the **[▶▶]** to exit or pressing and hold this button for 2 seconds to exit during setting .

VI Maintenance

- 1.Avoid prolonged exposure to the sun or high temperature to avoid turning black.
- 2.Avoid contact with water or corrosive liquids to avoid damage, this product is not water resistant.
- 3.Keep it away from high static objects, high magnetic field source, such as the screen, speakers and so on, to make sure not to cause damage or failure of the product
- 4.Please replace batteries when the symbol  shows up, meanwhile please make sure the battery were put in the right direction.

The Executive Standard No.:GB/T22776-2021

The warranty period is one year, battery and physical damage is excluded.

VI Contact Us

Leaptimer Industrial Co.,Ltd.

Add:2F, 8th Building, Fluent Industrial Garden,

Dalang, Longhua, Shenzhen,China 518109

Tel: +86-755-36811327

Fax: +86-755-26753299

Email: hbgm@hbtimer.com

Web: www.leaptimer.com www.hbtimer.com

4

